

# McDonnell Douglas MD-80

## Flight CheckList



### First flight of the day

- Battery.....ON
- Ground Power.....ON
- Light Display.....ON
- Emergency Lts.....ON
- Anti Skid.....ON
- Logo Light.....ON
- Position Light.....ON
  
- Irs.....ON
- CDU.....SET
- Doors/Cargo.....OPEN
- Fuel.....LOAD
- Stall/Warn.....TEST
- Flight Recorder.....ON
  
- Meter Sel.....CPT
- Fuel Pumps.....OPEN
- Start Pump.....ON
- APU.....START
- L/R Bus.....ON
- Start Pump.....OFF
- Air Cond.....ON
  
- Supply.....AUTO
- X-Feed Valve.....OPEN
- No Smoking.....ON
- Galley.....ON
- CDU.....SET
- ZFW/GW.....SET
- CG/Flap.....SET
  
- Trim Position.....SET
- Seat Bells.....ON
- Boarding.....START
- AP Altitude.....SET
- AP. Vertical speed.....SET
- AP. Speed.....SET
- Hydraulics.....ALL ON
- Yaw damp.....ON
- Tcas.....SET

### After Start

- Ignition.....OFF
- Start Pump.....OFF
- Supply.....AUTO
- APU.....OFF
- L/R Bus.....OFF
- Flap.....SET
- FD.....ON
- A.P. NAV.....PRESS
- To Flex.....ON
- Spoiler.....ARM
- Auto Brake.....TO
- Flap.....11°
- Engine Fire.....TEST
- Anti Ice Tail.....AS REQ

### Before Start

- Doors/Cargo.....CLOSE
- Fuel Pumps.....ALL ON
- Anti Collision LTS.....ON
- Supply.....OFF
- Start Pump.....ON
- Galley.....OFF

### Start Engine 2

- Ignition S4S.....A/B
- Starter.....ON
- Fuel Valve (21%).....OPEN
- Start.....OFF

### Before Taxi

- Nose Light.....ON
- Air Foil.....ON
- Flood LTS.....AS REQ.
- Anti Ace.....AS REQ.

### Start Engine 1

- Ignition S4S.....A/B
- Starter.....ON
- Fuel Valve (21%).....OPEN
- Start.....OFF

### Flight Control

- Full Left.....CHECK
- Full Right.....CHECK
- Full Up.....CHECK
- Full Down.....CHECK
- Yaw Full Left.....CHECK
- Yaw Full Right.....CHECK
- Spoiler.....CHECK

### Before Take off

- X-Feed Valve.....CLOSE
- Ignition.....OVRD
- Wing LTS.....ON
- Strobo LTS.....BOTH
- Flood LTS.....OFF

# McDonnell Douglas MD-80

## Flight Checklist



**Simmer Dream**

*corsi per simulatori di volo*

### On Runway

- Nose LTS.....OFF
- Landing LTS.....ON
- Clock.....START
- Auto Throt.....ON

### After Take Off

- Landing Gear.....UP
- A.P.....ON
- A.P. Nav.....ON
- CL.....ON
- A.P. Vnav.....ON
- Flap.....ZERO
- Spoiler.....OFF
- Autobrake.....OFF

### Over Transition Alt

- Wing LTS.....OFF
- Altitude Set.....STD

### Over 10.000 Feet

- Landing LTS.....OFF
- Anti Ice.....ON
- Seat Bells.....ON
- Galley.....ON
- Ignition.....OFF
- Radar.....CHECK

### Before Decent

- Altitude.....SET
- ILS Data.....SET

### Under 10.000 Ft

- Seat Bells.....ON
- Landing LTS.....ON
- ILS Altitude.....SET
- Spoiler.....ARM
- Autobrake.....MIN

### Under Transition Alt

- Wing LTS.....ON
- Qnh.....SET
- Anti ICE.....CHECK
- Ignition.....OVRD
- LDG Altitude.....SET
- LDG Baro.....SET
- DH.....SET

### Before Landing

- Galley.....OFF
- A.P. VOR/LOC.....ON
- Speed.....CHECK
- A.P. ILS.....ON
- Speed.....LANDING
- Gear.....DOWN
- Flaps.....FULL
- Go Around ALT.....SET
- G.A.....SET
- Auto Throt.....OFF
- A.P.....OFF

### After Landing

- Flaps.....ZERO
- Spoiler.....OFF
- Landing LTS.....OFF
- Strobo LTS.....OFF
- Auto Brake.....OFF
- Wing LTS.....OFF
- Nose LTS.....ON
- Ignition.....OFF
- Start Pump.....ON
- APU.....Start
- L/R Bus.....ON
- Start Pump.....OFF

### Parking

- Parking Brake.....ON
- Nose LTS.....OFF
- Anti Collision LTS.....OFF
- Engine.....SHUT DOWN
- FD.....OFF
- No Smoking.....OFF
- Seat Bells.....OFF
- Fuel Pumps.....OFF
- Meter Sel.....OFF
- Yaw Dump.....OFF
- Door/Cargo.....OPEN
- Radar.....OFF