

BOEING 737 MAX

Flight CheckList



SIMMER DREAM

First flight of the day

- Battery.....ON
- Ground Power.....ON
- Emergency LTS.....ON
- Electric Switch.....BATT
- IRS Switch L/R.....NAV
- Service Interphone.....ON
- Speed Warning.....TEST
- FMC Set.....IRS POS
- Background LTS.....AS REQ.
- AFDS Flood LTS.....AS REQ.
- Main Pan L/R LTS.....AS REQ.
- Overhead Pan LTS.....AS REQ.
- Pedestal LTS.....AS REQ.
- APU/Engine Fire.....TEST
- Cargo Fire System.....TEST
- SYS (system test).....TEST
- Fuel.....LOAD
- L/R Window Heat.....ON
- Probe Heat A/B.....ON
- Trim Air.....ON
- Payload/Cargo.....LOAD
- L/R Pack.....AUTO
- L/R Recirc Fan.....AUTO
- Wing Anti Ice.....ON
- APU Bleed.....OFF
- Isolation Valve.....OPEN
- HYD Pumps ELEC 1/2.....OFF
- HYD Pumps ENG 1/2.....ON
- Logo LTS.....ON
- Position LTS.....STEADY UP
- Wheel LTS.....ON
- FMC.....SET ROUTE
- A.P. Altitude.....SET
- Press Altitude.....SET
- A.P. Speed.....SET
- Stall Warning 1/2.....TEST

 **CONTINUE**

Start Engine 1

- Engine Starter L.....GRD
- Fuel Valve 1 (25%).....IDLE
- Engine Starter L OFF.....CHECK

After Start

- Ignition Switch.....BOTH
- Bus Transf Gen 1/2.....ON
- APU.....OFF
- Pack L/R.....AUTO
- Isolation Valve.....AUTO
- APU Bleed.....OFF
- Electric Switch.....GEN 1/2
- FD L/R.....ON
- Autobrake.....RTO
- Flaps.....SET

Flight Control

- Full Left.....CHECK
- Full Right.....CHECK
- Full Up.....CHECK
- Full Down.....CHECK
- Yaw Full Left.....CHECK
- Yaw Full Right.....CHECK
- Spoiler.....CHECK

Before Start

- Doors/Cargo.....CLOSE
- QNH.....SET
- Anti Collision LTS.....ON
- HYD Pumps Elec 1/2.....ON
- Fuel Pumps.....ON
- L/R Pack.....OFF

Start Engine 2

- Ignition Switch.....L/R
- Engine Starter R.....GRD
- Fuel Valve 2 (25%).....IDLE
- Engine Starter R OFF.....CHECK

Before Taxi

- Runway turn off LTS L/R.....ON
- Taxi LTS.....ON
- Anti Ice.....AS REQ.
- TCAS.....ON

Before Take Off

- Auto Throttle.....ARM
- VNAV/LNAV.....ON
- Engine Start Switch L/R.....CONT
- Strobe LTS.....STEADY
- Wing LTS.....ON
- Chimes Only.....ON

CHECKLIST TO BE USED ONLY IN FLIGHT SIMULATORS

BOEING 737 MAX

Flight Checklist



On Runway

- Landing LTS.....ON
- Clock ET.....START
- Engine Stable 40%.....CHECK
- TO/GA.....PRESS

After Take Off

- Landing Gear.....UP
- Flap.....ZERO
- CMD L/R.....ON
- Landing Gear.....OFF
- Auto Brake.....OFF
- Taxi LTS.....OFF
- ND SET.....TERRAIN

Over Transition Alt

- Runway Turnoff LTS.....OFF
- Wings LTS.....OFF
- QNH Set.....STD
- Anti Ice.....AS REQ
- Chimes Only.....OFF

Over 10.000 Feet

- Landing LTS.....OFF
- Seat Bells.....OFF
- Engine Start Switch.....AUTO

Before Descent

- Descent Altitude.....SET
- ILS Freq.....SET
- FMC Init Ref.....SET

Under 10.000 Ft

- Engine Start L/R.....CONT
- Landing LTS L/R.....ON
- DH Baro Minimums.....SET
- Landing Altitude.....SET
- Anti Ice.....CHECK
- Seat Bells.....ON

Under Transition Alt

- ILS Altitude.....SET
- Runway Turnoff LTS.....ON
- Wing LTS.....ON
- QNH.....SET
- Speed Brake.....ARM
- Auto Brake.....SET
- Chimes Only.....ON

Before Landing

- A.P. VOR LOC.....ON
- Speed.....CHECK
- A.P. APP.....ON
- Speed.....LANDING
- Flaps.....SET
- Gear.....DOWN
- Flaps.....FULL
- Taxi LTS.....ON
- Go Around ALT.....SET
- CMD L/R.....OFF
- Auto Throttle.....OFF
- Minimums.....CHECK

After Landing

- Flaps.....ZERO
- Speed Brake.....OFF
- Landing LTS.....OFF
- Strobo LTS.....OFF
- Wing LTS.....OFF
- Auto Brake.....OFF
- Engine Start Switch.....AUTO
- APU.....START
- Bus Transf. APU GEN.....ON
- DH Baro.....RST
- ND Terrain.....OFF
- Chimes Only.....OFF

Parking

- Parking Brake.....ON
- Engine Valve.....CUTOFF
- Taxi LTS.....OFF
- Runway Turnoff.....OFF

- Anti Collision LTS.....OFF
- Seat Bells.....OFF
- FD.....OFF
- Fuel Pumps.....OFF
- Hyd Pumps Elec 1/2.....OFF
- Isolation Valve.....OPEN

- APU Bleed.....AS REQ.
- Window Heat L/R.....OFF
- Probe Heat A/B.....OFF
- Yaw Dump.....OFF
- Door/Cargo.....OPEN

- Elect Switch.....APU
- Trim Air.....OFF
- TCAS.....OFF
- FLT DK Door.....OPEN